



Mounting dimensions, see page 2.

Modes

Circuit diagram, see figure 1 on page 12.

:	The device can be operated in two modes.
	Mada 4 (av warka)

Mode 1 (ex works): Lighting On/Off at the device button (Off automatically after power returns). Mode 2:

Lighting On/Off at the external light switch (Off automatically after power returns).

To change mode, see table under **Operation**:

Installation, see figure 2 onwards on page 12.

Operation

Button	Function
	Light on/off
	 Pressing the button switches the mirror on with the selected settings. The white LED goes off.
	 Pressing the button again switches the mirror off. The white LED lights up.
	To change mode
	Switch off the reflector.
	Press the button and hold it down for 15 seconds.
	 The light comes on again if the mode has been changed.
	Repeat the procedure described to re-enable mode 1.
	 The white LED can be deactivated.
	 Switch on the mirror.
	 Press and hold the button for 15 seconds.
	- The lighting gets lighter or darker.
	 The lighting switches off briefly and the white LED is deactivated.
	To switch the white LED back on, repeat the de- scribed procedure.
	Dimming the lighting
	 Press the button when the mirror is switched on and hold until the desired brightness or the end value has been reached.
	The setting is stored and reproduced when switched on again (only for connection type 1, see figure 1 on page 12).

Replacement parts with order numbers, see page 15.



The light sources may only be replaced by the manufacturer, its customer service or by an equally qualified person.



For information about warranty and maintenance, see the enclosed **Maintenance and Warranty Passport**.



Disposal information! Equipment with this labelling must **not** be disposed of in household refuse, but must be disposed of at a collection centre intended for this purpose.